

Hockey Scoreboard Quick Reference




BEFORE THE GAME STARTS

1. Turn on the Scoreboard & Controller
 - o Power on the MPCW-7 control box (switch on right side).
2. Set Game Time
 - o Press SET, then TIME.
 - o Enter time as MMSS (e.g., 2000 = 20:00).
 - o Press YES.
3. Set Period
 - o Press PERIOD, then press number key (1–3 or OT = 4).



RUNNING THE CLOCK

- **Start Clock:** Press TIME ON or use handheld switch (right position).
- **Stop Clock:** Press TIME OFF or use handheld switch (left position).
- **Reset Time:** Press SET, then TIME, enter new value.

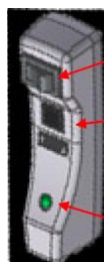

Two Position Switch

- Right is Time On Left is Time Off

Horn Switch

- Press to sound horn
- Release to silence the horn
- Horn will sound for up to 4 seconds

Indicator Light

- Flashes when connected to a powered up MPCW-7

HORN

- **Sound Horn:** Press HORN key or handheld horn button.
- Auto horn will sound at period end.

ADDING SCORE

1. **Home Score:** Press HOME SCORE, then a number (adds to score).
2. **Guest Score:** Press GUEST SCORE, then a number.

- ✓ Goal lights will flash when a goal is added.



*Always double check time/period before puck drop. Use handheld switches when possible—they're faster and intuitive.
Keep the manual or this sheet handy for new volunteers!*




⊖ PENALTIES

Add a Minor Penalty:

1. Press HOME NEW MINOR or GUEST NEW MINOR.
2. Enter player number.
3. Press YES to accept default 2:00 – or enter custom time (01:30)

Add a Major Penalty:

1. Press HOME NEW MAJOR or GUEST NEW MAJOR.
2. Enter player number.
3. Press YES to accept default 5:00 – or enter custom time.

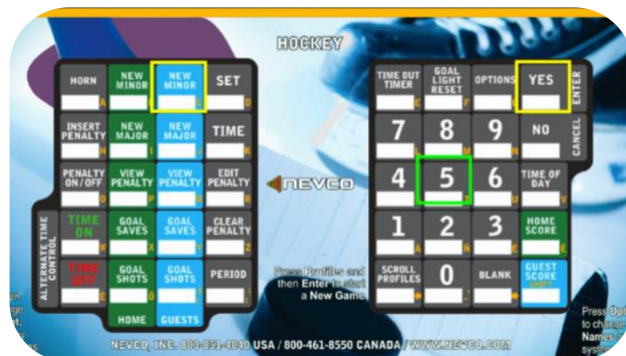

Clear Penalty:

- Press VIEW PENALTY to find it, then press CLEAR PENALTY.

👁 VIEWING PENALTIES

- Press HOME VIEW PENALTY or GUEST VIEW PENALTY.
- Use arrows to scroll through if multiple.
- Top 2 show on scoreboard automatically.

🕒 TIMEOUTS

- Press TIME OUT TIMER
- Choose timeout 1–5 by number key.
- Timer starts immediately.
- To end early: Press TIME OUT TIMER twice.

Defaults

Time Out	Time	Warning
1	:30.0	:15.0
2	:45.0	:15.0
3	1:00.0	:15.0
4	1:30.0	:15.0
5	15:00.0	:15.0



📊 GOAL SHOTS & SAVES

- Press HOME GOAL SHOTS or GUEST GOAL SHOTS, then a number.
- Press HOME GOAL SAVES or GUEST GOAL SAVES, then a number.

*Always double check time/period before puck drop. Use handheld switches when possible—they're faster and intuitive.
Keep the manual or this sheet handy for new volunteers!*