

Time Clock Basics (14u House)

Turning on the machine

Flip the power switch on the RT side of the machine

(if it asks you to start where you left off the answer is usually no)

When it asks you for the model number select 871

When it asks for if you want penalty's select "yes"

Start of the Game Set Up **Warm up is 3 minutes. Games are periods are 14-minute periods**

Time clock: Set > Time > enter the time > yes > choose which period

Score (Set both teams at 0) Home Goal > 0 >yes Guest > 0 > yes

Adding a goal

(Home or Guest Score) > (+1 will display) choose # 1 > yes > and the new score will display.

Correcting a score

Set- (Home or Guest Score)> enter the correct score > yes

Penalty *1.5 minutes for penalties, 5 minutes for majors.

Set > Choose home or guest penalty > enter the penalty time > select yes > you must choose a 2-digit player number > push yes again.

*I use the player number with the penalty so if I need to cancel that kid's penalty (power play) then I know the number I used.

*If you have more than 2 players in the penalty box you can keep adding penalties and the box will remember then and display them in order.

2 in 10 Penalties- You only display the 2 minutes on the clock and you will need to calculate the when they can go back in and tell the person in the box.

Cancel a Penalty

Choose Home Penalty or Guest Penalty > penalty clear > select yes.

*If you have more than 2 players on the box you will have to keep pushing the home penalty or guest penalty button until that penalty shows then follow the steps above.