

WSHA Scoreboard setup

PLEASE FOLLOW THESE STEPS AND NEVER UNPLUG OR CONNECT ANYTHING.

- 1.) Turn on the computer
- 2.) Turn on the Novastar Video Controller
- 3.) Log into the computer. Ask a board member, parent rep, or coach for the password.
- 4.) Open the ProPresenter Program on the desktop.
- 5.) Once Open, Make sure you can see the following "Bins"
 - a. Media Bin – Found in "View", click on Media Bin. (for graphics)
 - b. Audio Bin – Found in "View", click on Audio Bin. (for music)
- 6.) Enter both teams into the program by clicking WS Home/WS Visitor, put the name in and hit "ENTER".
- 7.) NOTHING ELSE ON THE COMPUTER NEEDS TO BE ADJUSTED. The scores, penalties, shots, etc. will be controlled by the Daktronics Controller.
- 8.) Set the Daktronics scoreboard to the appropriate time. "Set Main Clock", enter the time (12 minutes is 12000).
- 9.) Test the big scoreboard to make sure that the controller is synced to the program. You can do this by simply starting the clock and making sure both scoreboards are synced.
IF, the scoreboard is not receiving information from the controller, DO NOT UNPLUG OR CHANGE ANYTHING. Refer to the FAQ for instructions.