

TYPICAL OPERATING PROCEDURES FOR CONTROL CONSOLES

Quick Reference Guide

Function	Control Console Key Sequence
Setting the Timer/Clock.	Press <SET MAIN CLOCK> Enter the time in Minutes and Seconds. For example: 1200. Look at the LCD display on the Control Console to ensure the time is entered correctly. For example: 12:00. Press <ENTER> to accept the changes.
To Reset the Score. (Same process for Home and Guest).	Repeatedly press the <SCORE+1> or <SCORE-1> key until the desired number is displayed. OR Press <EDIT> Press <SCORE+1> Enter the desired number using the numeric keypad. Press <ENTER> to accept the changes.
To Increase the Score. (Same process for Home and Guest).	Press <SCORE+1>
Setting the Period.	Press <PERIOD> Enter the number 1, 2 or 3 using the numbers on the keypad. Press <ENTER> to accept the changes.
Entering a Penalty. (Same process for Home and Guest).	Press <PLAYER PENALTY> Press <ENTER> to accept the entry. Enter the player number using the numbers on the keypad. Press <ENTER> to accept the changes. Press <ENTER> if the desired time is displayed (default is 2 minutes) OR first enter the desired time using the numeric keypad then press <ENTER> .
Clearing a Penalty. (Same process for Home and Guest).	Press <PLAYER PENALTY> Use the UP/DOWN key to locate the player penalty to be cleared. <i>!!Penalties may not be listed in the order that they were entered!!</i> Press <CLEAR> Press <ENTER> to accept the changes.
To Reset the Shots on Goal. (Same process for Home and Guest).	Repeatedly press the <SHOTS ON GOAL +1> or <SHOTS ON GOAL -1> key until the desired number is displayed. OR Press <EDIT> Press <SHOTS ON GOAL+1> Press <CLEAR> to remove the shots from being displayed on the scoreboard OR enter the desired number using the numeric keypad. Press <ENTER> to accept the changes.
To Increase the Shots on Goal. (Same process for Home and Guest).	Press <SHOTS ON GOAL+1>
To Stop the Clock.	Press <STOP>
To Start the Clock.	Press <START>
To Sound the Horn.	Press <HORN> .

HOCKEY/ LACROSSE/
HANDBALL

CODE TYPE

4000 SOG CONSOLE

4401 W/O SOG

4402 W/ SOG

4101 PLR-FOL

4103 SERIES 3000

4104 SERIES 2500

4105 PLR/FL/PTS

4601 HK > FB

4602 LC > FB

4701 HK > SOC

4702 LC > SOC

PLACE CODE
LABEL HERE

ENTER THIS
CODE NUMBER

HOME

SCORE +1 SCORE -1 TIME OUT <

SHOTS ON GOAL +1 SHOTS ON GOAL -1

SAVES +1 SAVES -1 PENALTY <

PLAYER PENALTY • DELETE PENALTY • CLEAR ALL PENALTIES •

RECALL SHOT TIME SET SHOT TIME TIME OUT ON / OFF

ENABLE PENALTY CLOCKS DISABLE PENALTY CLOCKS

MINOR PENALTY MAJOR PENALTY

PERIOD +1

GUEST

SCORE +1 SCORE -1 TIME OUT >

SHOTS ON GOAL +1 SHOTS ON GOAL -1

SAVES +1 SAVES -1 PENALTY >

PLAYER PENALTY • DELETE PENALTY • CLEAR ALL PENALTIES •

7 8 9

4 5 6

1 2 3

CLEAR NO 0 ENTER * YES

⬅ ➡ ⬆ ⬇ ⬅

EDIT

AUTO HORN • HORN □

COUNT UP/DOWN • SET MAIN CLOCK •

START □ STOP