



Scoreboard Instructions – MITE GAMES

Turn on the scoreboard control using the rocker switch on the right side of the main unit.

The display will show:

[START WHERE TURNED OFF LAST?] Press **NO**

[GO TO A BOOKMARK?] Press **NO**

[ENTER YOUR MODEL CODE] Press **8 – 7 – 1** display will show [HOCKEY]

[DO YOU WANT TO OPERATE WIRELESS?] Press **YES**

 
 
the control will prompt [SELECT A GROUP] and display [HOCKEY RINK] Press **YES**

[DO YOU WANT TO USE PENALTY TIME OUT?] Press **NO**

[0:00.0 DN] The scoreboard control is on and ready to set the time

To set the time before each period

Press



The display will show:

[SET MM:SS.s] Press **1 – 5 – 0 – 0**



[SET 15:00.s] Press **YES**

[PERIOD 0] Press **1** or the number for the proper period

The display will show: [15:00.0 DN]

To set the segment timer to automatically sound the horn every 1:30

  Press



The display will show:

[DO YOU HAVE AN AUXILIARY TIME DISPLAY CONNECTED?] Press **NO**

[DO YOU WANT TO SWITCH TO DIM?] Press **NO**

[USE AUX TIMER?] Press **NO**

[ENABLE SEGMENT TIMER?] Press **YES**

[SEG 01 MM:SS] Press **0 – 1 – 3 – 0**

[SEG 01 01:30] Press **YES**

[ADD ANOTHER SEGMENT?] Press **NO**

[DISPLAY SEGMENT TIMER ON SCOREBOARD?] Press **NO**

[STOP TIME AT EACH SEGMENT?] Press **NO**

[CHANGE DIRECTION OF MAIN CLOCK?] Press **NO**

[DISABLE .1 SEC. SHIFT TIMER?] Press **NO**

[END OF PERIOD TO TURN OFF UPON SETTING THE TIME?] Press **NO**

[SET A BOOKMARK?] Press **NO**

The display will show: [15:00.0 DN]

Start/ Stop the game clock using the rocker switch on the hand held unit

Turn the scoreboard OFF using the rocker switch on the right side of the main unit after the MITE game, otherwise the auto horn segments will remain intact for the next game