

# Webster/Kirkwood Score Board Cheat Sheet

Set Time	
Set	
Time	
3	
:	
0	
0	
Yes	
0	
	Period 0 = Warm-up 1,2, or 3 = period

Score		
Home Score	or	Guest Score
1		1
Just push Home or Guest score button and the #1. It will increase the total score		

## Correcting Score

Set		Set
Home Score	or	Guest Score
Exact score		Exact score

To correct a score you have to push the "SET" button first, then the Home or Guest and then what the correct score should be.

Penalty		
Set		Set
Home Penalty	or	Guest Penalty
1	Amount of penalty 1:30 or 2:00	
:		
3		
0		
Yes		
0	Jersey	must be two numbers
0	Number	ie. 02 or 23

## Remove Penalty

Home Penalty		Guest Penalty
Penalty Clear	or	Penalty Clear
Yes		Yes

