

FAIR-PLAY

byTRANSLUX

HK 5:42.
HOME SCORE 1

AUTO
HORN

T.O.B.	AUTO HORN	CLOCK SET CLK. UP/DN	QTR HALF NEW GAME	HOME TIMEOUT T.O.L.	VISITOR TIMEOUT T.O.L.	-1 3:00 BLANK	7	8 ▲	9
BRI. DIM	HOME S.O.G.	VISITOR S.O.G.	POSS.	HOME PENALTY	VISITOR PENALTY	+3 2:00	4 YES	5 NEXT	6 NO
	HOME CORNER KICKS	VISITOR CORNER KICKS				+2 1:00	1	2 ▼	3
	HOME SAVES	VISITOR SAVES	BAT / RF	HOME SCORE H.T.N.	VISITOR SCORE V.T.N.	+1 0:30	CLR ESC	0	ENTER
							SHIFT		

HORN

TIME IN



HOCKEY

HOCKEY CONFIGURATION




Shown are the most common configuration settings for high school (NFHS) and college (NCAA) hockey.

1. Turn off the MP-70/50.
2. Press and hold **ENTER** key while turning on the MP-70/50, wait until **BASKETBALL? Y/N** screen appears before releasing the **ENTER** key.
If **CONTROL LOCKED** appears, then you must first **UNLOCK** the control. Refer to **LOCK/UNLOCK** instructions.

REFERENCES:

- 2010-11 NFHS Ice Hockey Rules Book, Robert B. Gardner (Publisher), NFHS Publications. National Federation of State High School Associations.
- 2010-12 NCAA Men's and Women's Ice Hockey Rules and Interpretations. NCAA [ISSN 0735-9195]. National Collegiate Athletic Association.

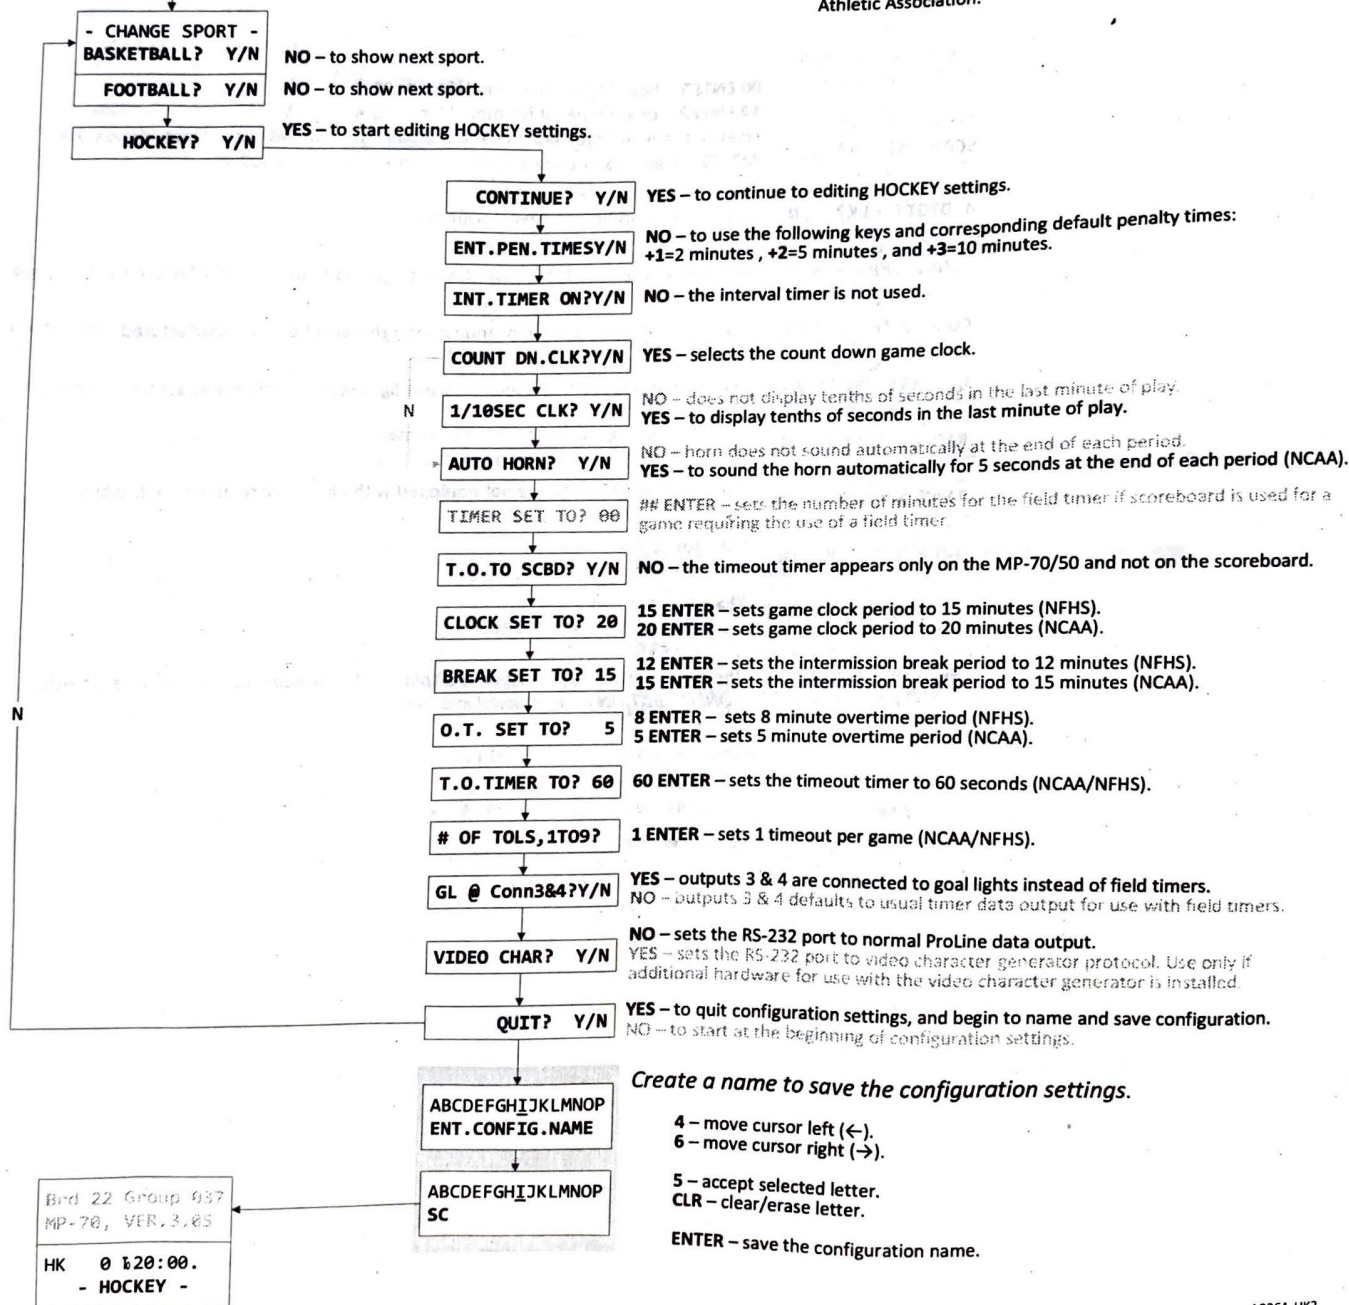

HOCKEY SYSTEM SETTINGS



Shown are the most common system settings for high school (NFHS) and college (NCAA) hockey.

1. Turn off the MP-70/50.
2. Press and hold 0 key while turning on the MP-70/50, wait (2 seconds) until "SCBD TYPE #?" appears before releasing the 0 key.
If CONTROL LOCKED appears, then you must first UNLOCK the control. Refer to LOCK/UNLOCK instructions.

Brd 00 Group 900
MP-70, VER. 3.05
SYSTEM SETTINGS
SCBD TYPE #? —

00 ENTER — board type 00 for model HK-1600-4, or
14 ENTER — board type 14 for model HK-1780-4, or
refer to the board type label near the driver circuit board inside the scoreboard or
MP-70/50 Series Scoreboard Controller User Guide (98-0002-29).

4 DIGIT CLK? Y/N

YES — most scoreboards have 4 digit clocks.

CONN.1,MP69? Y/N

NO — this option is only for incandescent-light scoreboards manufactured before 1999.

CONN.2,MP69? Y/N

NO — this option is only for incandescent-light scoreboards manufactured before 1999.

CONN3&4,MP69?Y/N

NO — this option is only for incandescent-light scoreboards manufactured before 1999.

CLK.AT TIMER?Y/N ←Y

YES — if you are using
shot timers that have
built-in game clock.

RADIO@ TIMER?Y/N

NO — if not using a wireless shot/field timer.
YES — if using a wireless shot/field timer.

TEAM NAMES? Y/N

NO — most scoreboards are not equipped with electronic team name displays.
YES — if scoreboard is equipped with electronic team name displays.

24HR TOD CLK?Y/N

NO — for 12-hour clock.
YES — for 24-hour clock.

QUIT? Y/N

YES — to exit System Settings.
NO — to start over at the SCBD TYPE#?

HK 0 120:00.
- HOCKEY -

The current sport configuration is displayed. To configure for hockey, refer to HOCKEY CONFIGURATION for additional instructions.

Add Penalty

Home/away Penalty

+1 = 2:00 +2 = 5:00

Player #

Clear Penalty

Home/away Penalty

CLR

Player #

enter

CLR

enter

We were only able to set for 2 min and 5 min penalties so we had to watch the clock for 2 min and send the kids back in at 1 minute 30 seconds or set the clock for 5 min and send kid back in at 3 minutes.